


NEEMO ASSEMBLY

HARDWARE



NOTE: PARTIALLY INSTALL ALL SCREWS FIRST BEFORE FULLY TIGHTENING.

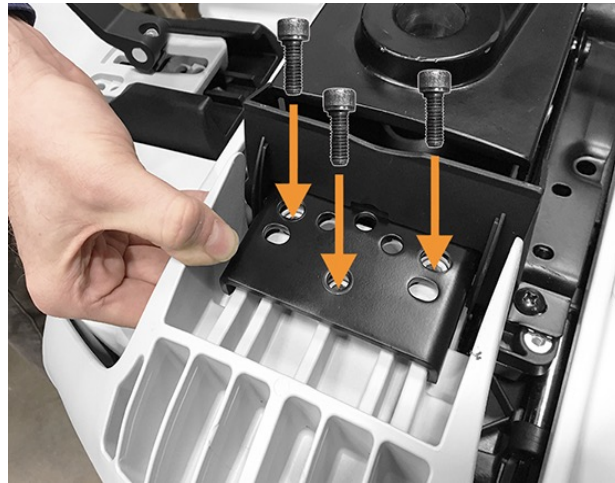

X 3



X 1

NOTE: POWER TOOLS CAN BE USED IF PREFERRED.

